


Removal


- 1 Pull rubber frame off of door seam in area of door lock and remove screw on door grip.
- 2 Press door grip forward.
- 3 Pull grip bracket and remove door grip.

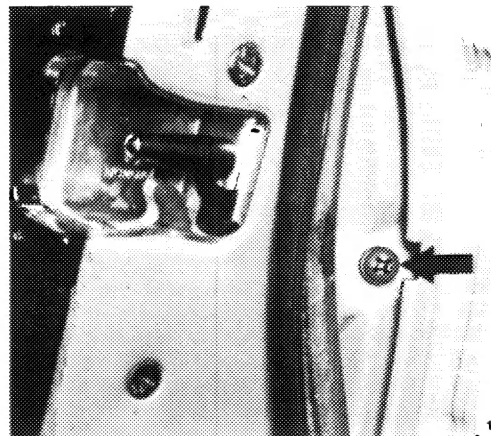

172-12 299


Installation

- 4 Screw front mounting screw into door handle so far equaling about the thickness of the outside door panel.

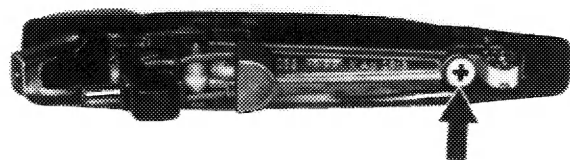


172-12300

- 5 Pull grip bracket and insert door grip into opening of door.

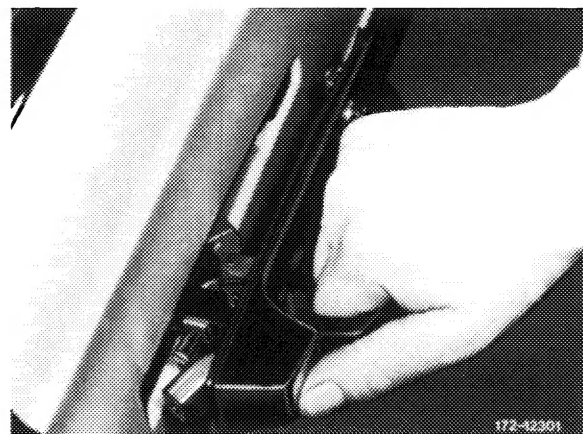


172-42301

6 Press back door grip, making sure that drive screw engages in door lock. If pre-load between outside door panel and front mounting screw is not sufficient, adjust screw accordingly.

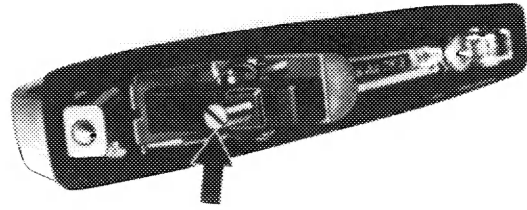

172-12302

Note: The clearance between drive screw and opening on door lock should be about 1 mm. To adjust, loosen counternut and move drive screw on spline.

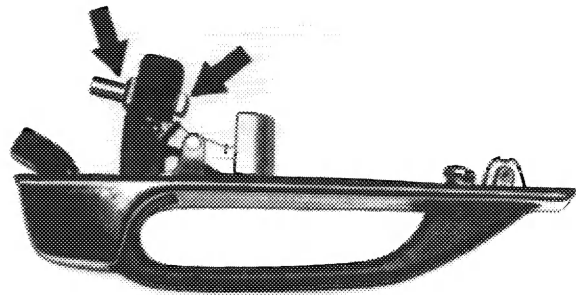

172-12303

7 Tighten door grip and install rubber frame.